

LOCKMASTER®

**BRITAIN'S
BEST SELLING**
multi-point door lock



The world's favourite lock since 1843

An ASSA ABLOY Group brand

ASSA ABLOY



The world's favourite lock since 1843



LOCKMASTER®

Thank you for choosing Lockmaster to protect your home.
To ensure that your new multi-point door lock functions correctly please follow the operating instructions below.




Lever/Lever Handles - 92mm centres

To lock (from inside or outside)

1. Close the door and engage the latch
2. Lift the lever up to throw the hooks & rollers to locked position
3. Turn the key to deadlock

To unlock (from inside or outside)

1. Turn the key to unlock the deadbolt
2. Push lever down to disengage the hooks, rollers and latch
3. Open the door

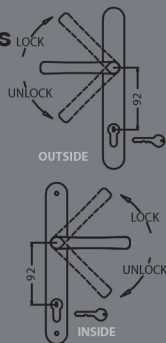

Offset Lever/Lever Handles - 92mm & 62mm centres (front door application)

To lock (from inside or outside)

1. Close the door and engage the latch
2. Lift the lever up to throw the hooks & rollers to locked position
3. Turn the key to deadlock

To unlock (from outside)

1. Turn the key to withdraw deadlock "unlock" (let go of key)
2. Push lever down to disengage the hooks and rollers only (let go of lever)
3. Turn key again in same direction to disengage the latch
4. Open the door
5. After entering, the door can be closed (engaging the latch only). In this position the door can be opened from the inside with the lever, it cannot be opened with the lever from the outside - YOU MUST USE THE KEY.
(Latch key facility)


To unlock (from inside)

Follow lever/lever instructions above.

Latch retainment

If your handle is fitted with the optional latch retainer button –
To hold the latch: withdraw latch and hold, turn button and release lever. Latch is held. **To release:** Turn button.

NOTE: DEADLOCK MECHANISM WILL NOT WORK ON EITHER TYPE UNLESS THE HOOK/ROLLER MECHANISM IS FULLY EXTENDED.

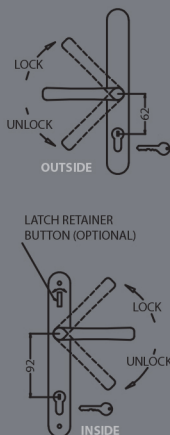

© Yale, April 2012, LOCKDRHING