



# Yale YFF Series Biometric Safe

Important – Read First

- **Securing the safe**

To reduce the risk of theft it is essential that your safe is securely fixed. Please use the included bolts and secure it to a solid concrete floor. For Maximum performance and correct installation a professional locksmith is recommended to install the safe.

- **Default User Code**

Default user code is 1 2 3 4 5 6. After the user code is reprogrammed, please remember it well and keep it in a secure place. Once it is reprogrammed, the default user code CANNOT be used to unlock the safe.

User should always check and confirm the reprogrammed user code before locking the safe.

- **Forget User Code**

Please remember your reprogrammed user code well and keep it in a secure place. In case it is forgotten, please unlock the safe with finger print (if possible) and then reprogram the user code again. Otherwise, please contact your local dealer or Yale sales representative for help.

- **Lock Down**

If wrong user codes are entered 5 times consecutively, the electronic panel will be locked down for 5 minutes. During lock down, the safe will not response to any input.

- **Finger Print Scan**

Worn-out or damaged finger prints may not be recognized by the scanner. User should press the finger against the scanner gently and slide the finger down in a steady speed.

Maximum 128 finger prints can be registered. The finger deleting process will delete all finger prints registered. User cannot choose only one finger print record to be deleted.

- **Battery Replacement**

When the battery icon appears, user should replace the battery with new ones as soon as possible. Changing battery will not affect the registered codes and finger prints.