



Description

1. LED: Red LED indicates Key Fob state.
2. Arm/Learn Button: Press for Away Arming and to learn in the Key Fob.
3. Emergency button: Press for emergency alarm.
4. Home Arm button: Press to part arm.
5. Disarm: Press to turn alarm off or to silence the alarm.
6. Battery cover.
7. Coin slot.
8. Locked indicator.
9. Unlocked indicator.

Inside the Box

- 1 x Remote Key Fob
- 1x CR2032 coin cell battery

For more information on this product and Yale Smart Living Range visit www.yale.co.uk/smart-living
Consumer Support: info@yale.co.uk

Programming

Program your Key Fob before installation and test afterwards. Please see your Alarm user manual.

Battery Installation

Remove the battery cover by using a coin to turn counter-clockwise until the arrow is pointing to the round dot (unlocked). Insert the battery with the positive (+) side up.

To replace the battery cover ensure the arrow is pointing towards the dot and turn the cover clockwise until the arrows are pointing towards each other (locked).



The 2 year guarantee for this product is active from the date of purchase (A copy of this guarantee is available on our website).



Specification

Environmental conditions:

-10c to 40c , relative humidity 70% non-condensing.

Radio:

868MHz FM

Compatible with Yale 'SR' and 'EF' Alarm Kits.



Issue No. 1A



PACKAGING

Information and illustrations are subject to change.
Yale reserves the right to alter the specification and product design at any time without notice.

WEEE

Note: Waste electrical products and batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

