

Y500 / 187 / 1 Key Access





Opening the storage compartment

- Slide the cover down to reveal the dials.
- Turn the dials to the preset factory combination 0-0-0-0 and align the numbers with the guide line.
- Push the release button to open the door.


Securing the storage compartment

- Close the compartment door and hold closed.
- Scramble the combination dials to lock the door.
- Slide the cover up.

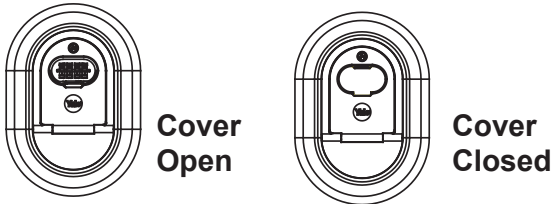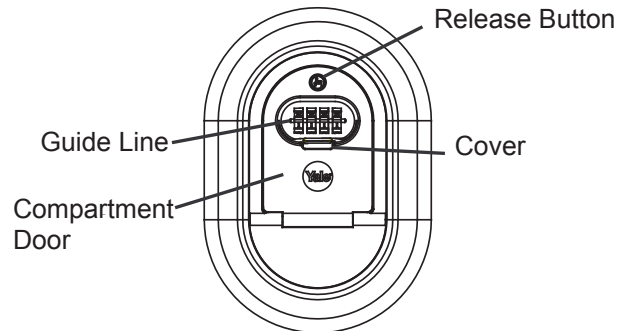

To set a new combination

- Open the compartment door.
- Push the reset lever left and down and keep it in this position.
- Turn the dials to set your own combination.
- Push the reset lever up and into the original position.
- Close the compartment door and hold closed.
- Scramble the combination dials to lock the door and conceal your combination.
- Close the Cover.
- Your new combination is now set.

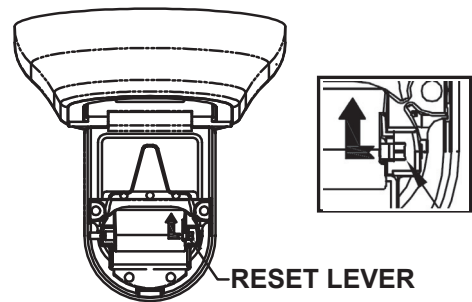



To Fit onto a wall

Tools Required:

Pencil or marker, Phillips head screwdriver. Level, drill and drill bit.

For masonry, anchors and a hammer are recommended.

- Open the compartment door.
- Position the lock on the desired surface.
- Use level to check the lock is vertical.
- Using the product as a template, mark the position of the screws on the surface using pencil or marker.
- Remove the product.
- Using an appropriate size drill bit.
- Insert anchors using hammer if required.
- Position lock.
- Insert and tighten screws. Close the compartment door and hold closed. Scramble the combination dials to lock the door and conceal the combination.
- Close the cover.

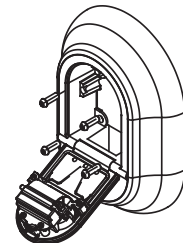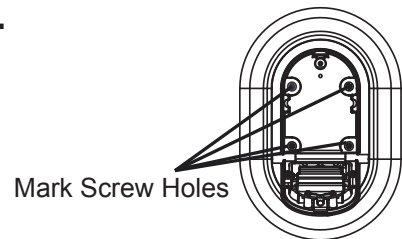

Remember:

The compartment door will remain open until you scramble the dials.

Keep the cover closed to increase weather resistance and to conceal the dials from view.

Record your combination. Store it in a safe place
— — — —

Issue No. 1



2 Year Guarantee Statement

This product is guaranteed for consumers against faulty workmanship, materials and function for a period of 2 years from the date of purchase providing the full installation and maintenance instructions are followed. Please keep your proof of purchase safe, this must be submitted when making a claim under this guarantee.

Please note that it is a condition of this guarantee that your Yale product:

- Has been correctly installed and maintained in accordance with the Yale installation and maintenance instructions provided to you at the time of purchase.
- Has not been modified or damaged in any way.
- Has not been subjected to unauthorized repairs.

Yale are responsible under this guarantee for repairing the product or replacing the product as we deem necessary. If there is fault with the product, please contact Customer Services on 01902 364647, who will give you the name of an expert and confirm what you need to do to make a claim under this guarantee.

Please do not carry out any repairs without our authority or by using an unauthorised expert. Any repairs or other works carried out without our authorization or by using an unauthorized expert will not be covered under this guarantee.

This guarantee is non transferrable and applies to products purchased in the United Kingdom only. This guarantee does not apply to normal wear and tear. This does not affect your statutory rights. A full copy of this guarantee is available upon request by writing to Yale UK, School Street, Willenhall, West Midlands. WV13 3PW or by visiting our website www.yale.co.uk.