



Mega Egress Hinge

Fitting Instructions




Contents


Technical Drawings:	
00115-2008-E-135.....	1
00115-2008-E-165.....	1
00115-2013-E-135.....	2
00115-2013-E-135.....	2
Fitting Instructions.....	3
Fitting to Sash	
00115-2013-E-135.....	4
00115-2013-E-165.....	4
00115-2008-E-135.....	5
00115-2008-E-135.....	5

Technical Drawings

0115-2008-E-135

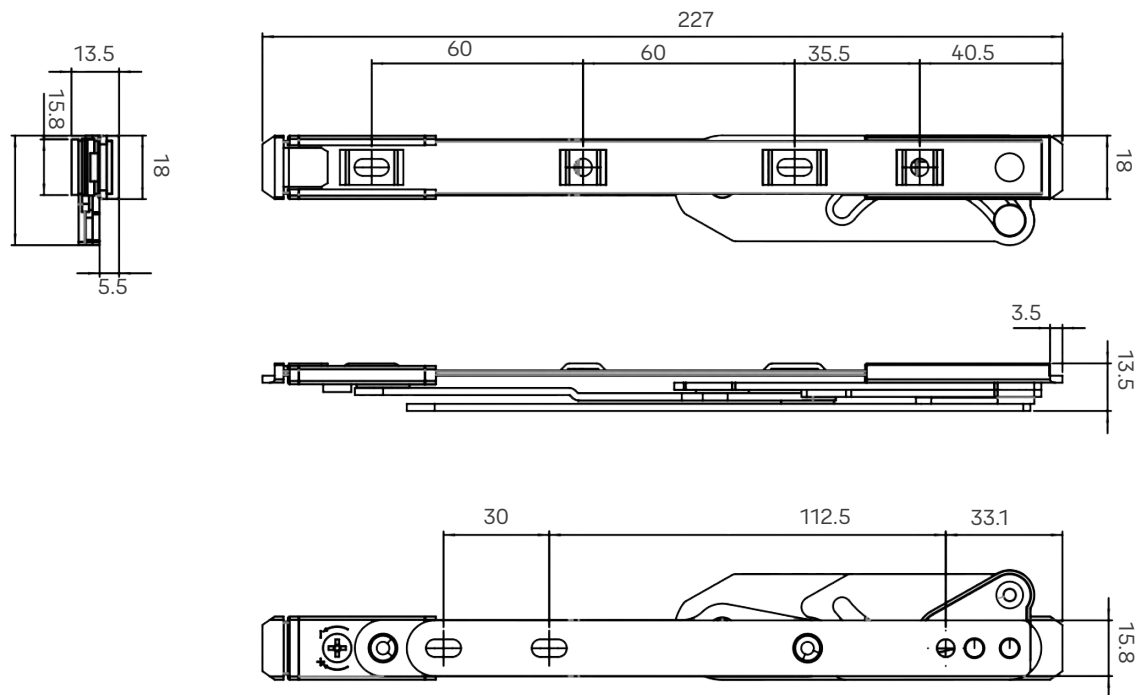


0115-2008-E-165

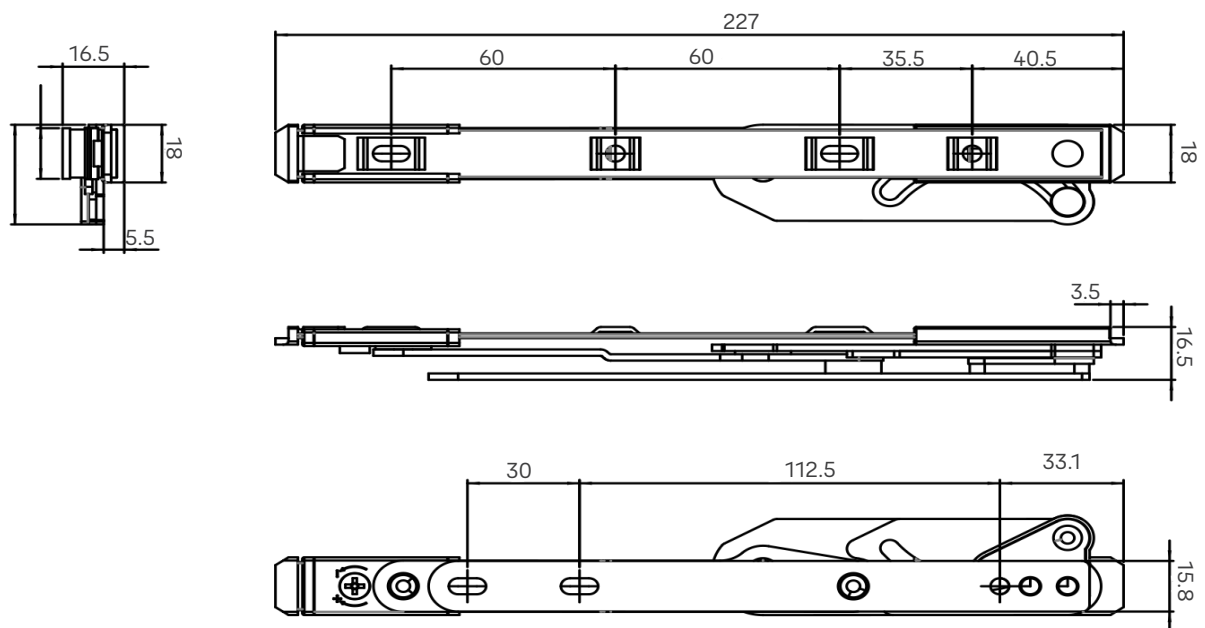


Technical Drawings

0115-2013-E-135

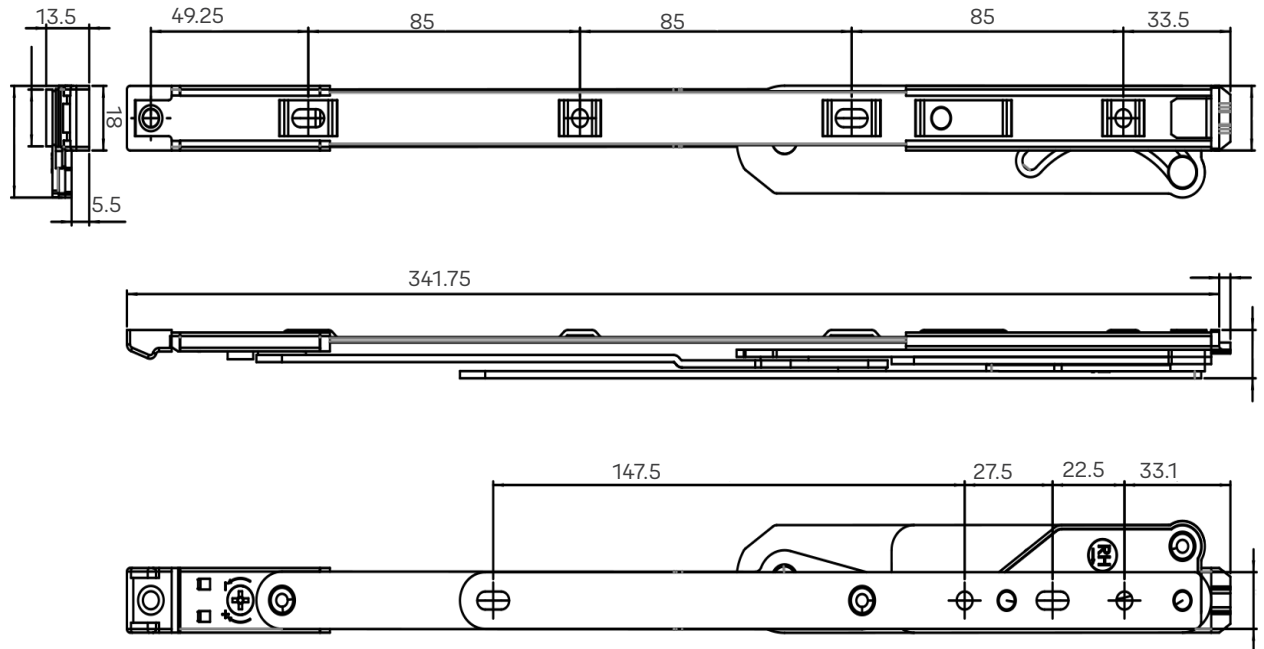

0115-2013-E-165

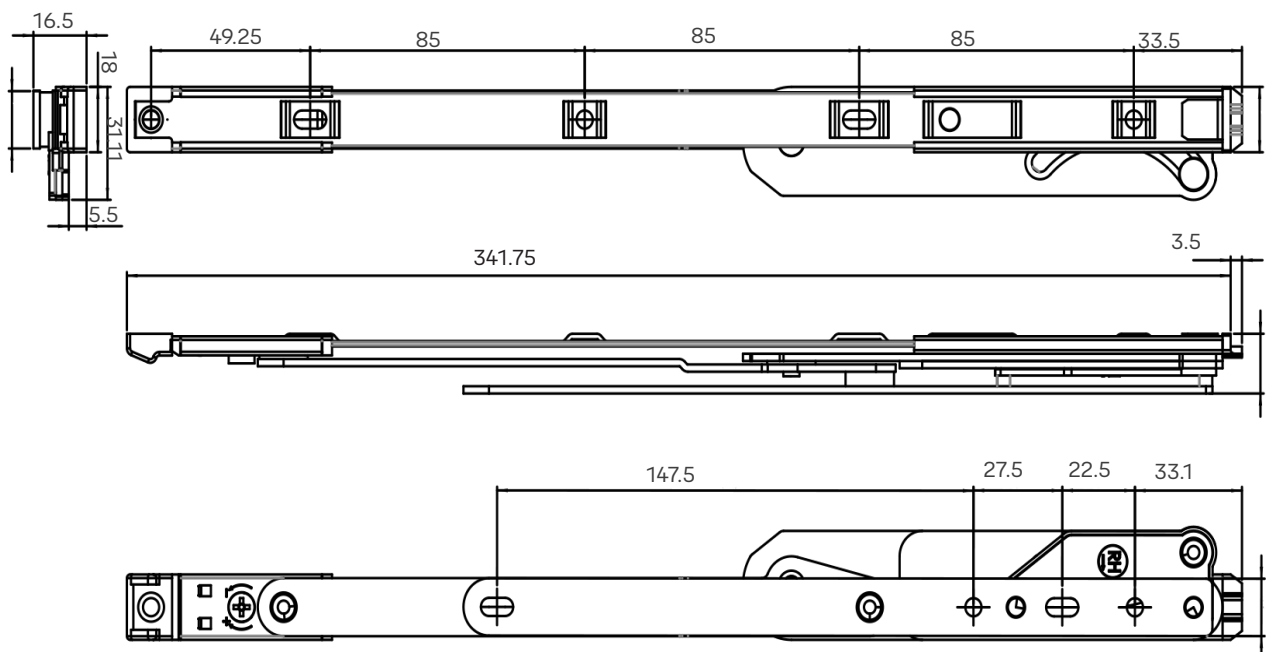

Fitting Instructions

Variant 0115-2013 is shown for illustration purposes.



Typical fit into UPVC profile.
Available stack heights: 13.5 and 16.5mm.



1. Position the hinge onto the frame and push the head of the hinge into the corner as shown.



2. Insert 2 countersunk screws* into the slots shown. The screws must be positioned at end of the slot, furthest from the head of the hinge as shown.



3. Slide hinge out so that screw is seen in the centre of slot leaving 2.5mm for adjustment if required.



4. Insert countersunk screws* into the 2 screw holes as shown.

* Yale recommends the following screws
4.3 x 25CSK into PVCu
3.9 x 25 CSKSD self drill into steel



5. Slide the "Easy Clean" activation button and move the top slider until final screw position is exposed and insert countersunk screw*.

Important note: Variant 0115-2008 does not have an easy clean function.

Fitting to Sash: 0115-2013



46mm is the distance from the edge of the Sash rebate to the middle of the first slot on the Sash.



1. It is recommended that pilot holes are pre drilled at the 2 slot positions on Sash.



2. Insert countersunk screws into the 2 slots and then make adjustments to Sash position if required. Then insert screw into the 2 holes.



3. To activate the "Easy Clean" mode push both black slide buttons (top and bottom) towards the corner and slide the Sash away.


Fitting to Sash: 0115-2008



136mm is the distance from the edge of the Sash rebate to the middle of the first slot on the Sash.



1. It is recommended that pilot holes are pre drilled at the 2 slot positions on Sash.

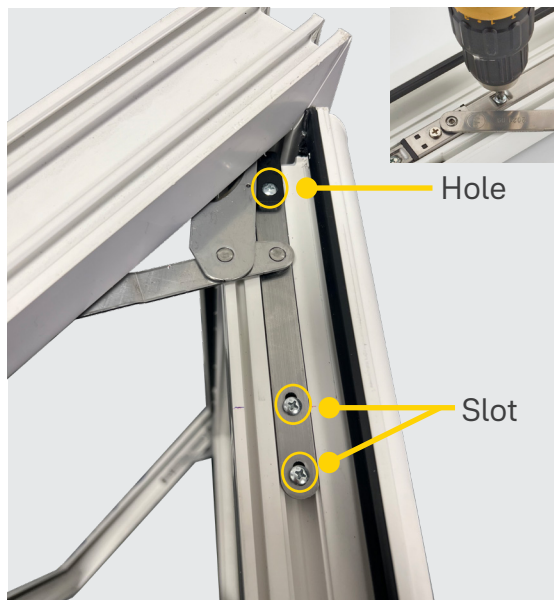

2. Insert countersunk screws into the 2 slots and then make adjustments to Sash position if required. Then insert screw into the screw hole.

This installation guide is to be used in conjunction with the following partcodes: 0115-2008-E-135, 0115-2013-E-135, 0115-2008-E-165 and 0115-2013-E-165.

Yale DWS
School Street, Willenhall, West
Midlands WV13 3PW, UK
T: 01902 366800 F: 01902 369041
www.yaledws.co.uk

Version 1.0 November 2023

© ASSA ABLOY